

# CLEANING THE SENSORS IN THE SELECTION SLIP READER

1. Push in the silver release button above the touch screen and bring the screen gently forward to access the reader.
2. Push down on the green button and pull the reader door toward you.
3. Do not use glass cleaner or spray any liquid directly on the reader. Wipe it with a lint free cloth dampened slightly with water or 91% isopropyl alcohol. Using a dry cloth will create static and may cause terminal problems.

FIGURE 1

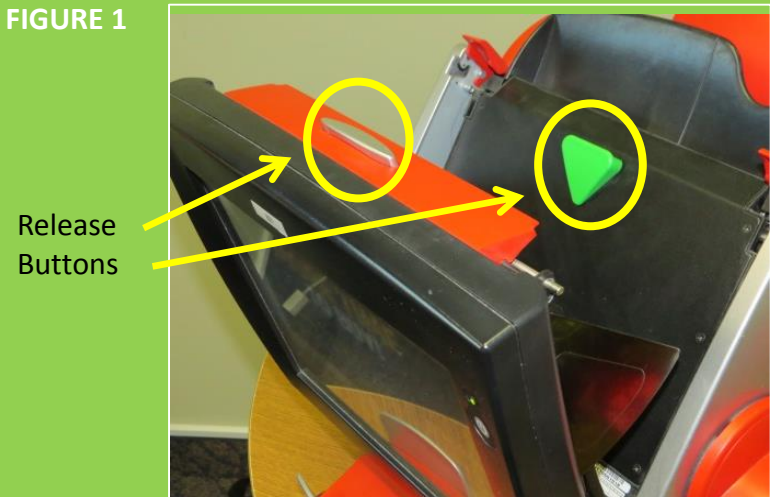


FIGURE 2



# CLEANING THE SENSORS IN THE SELECTION SLIP READER

4. Ensure you clean and remove any dust in the **18 small sensors** on both sides of the reader. These sensors can also be cleaned with a dampened cotton swab or compressed air.
5. Close the reader door firmly.
6. Push the terminal screen back into place.
7. You may also need to do a Power Reset.

FIGURE 3

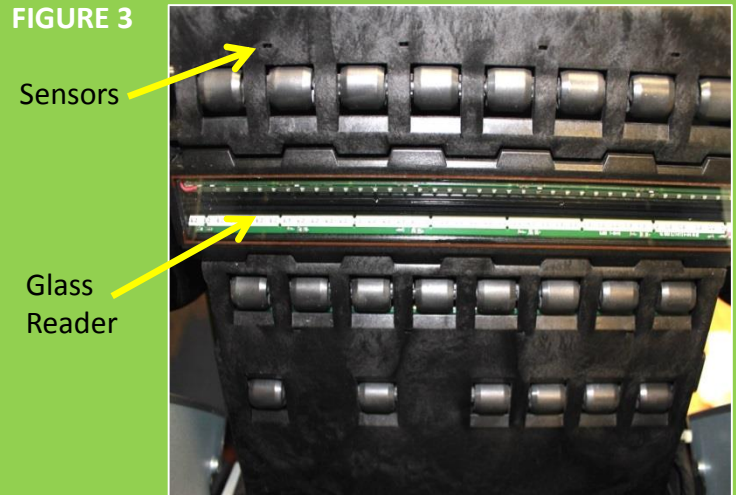


FIGURE 4

